

Remote Control Quick User's Guide

ApolloDMDs enables the user to activate several functions via a hand-held wireless remote control. This remote is necessary to update the Apollo solution as well. Please follow the directions below for either the Philips URC or One-For-All.

Philips URC



Code Set-Up

1. On the remote control, press the Code Search button until the red light stays on.
2. Press the VCR button.
3. Enter 330 using the number keys.
4. The remote control is now ready for use.

Menu Access On ApolloDMDs LCD Panel:

1. Make sure that the VCR/DVD functions are active by pressing the "VCR/DVD" button at the top of the remote control.
2. Press the "ENTER" button to enter the menu system.
3. Scroll through the main menu selections using the "CHANNEL UP" & "CHANNEL DOWN" buttons.
4. Select a menu option by pressing the "PLAY" button.
5. Press the "ENTER" button again to Exit menu.

One-For-All



Code Set-Up:

1. On the remote control, press the "VCR/DVD" button once. The red light on top will blink once.
2. Press the "SET" button and hold until the red light blinks twice, then release.
3. Enter 0081 using the number keys. If the red light blinks twice, the code is entered correctly.
4. The remote control is now ready for use.

Menu Access On ApolloDMDs LCD Panel:

1. Make sure that the VCR/DVD functions are active by pressing the "VCR/DVD" button at the top of the remote control.
2. Press the "MENU" button to enter the menu system.
3. Scroll through the main menu selections using the "CHANNEL UP" & "CHANNEL DOWN" buttons.
4. Select menu options by pressing the "PLAY" button.
5. Press the "MENU" button again to Exit menu.

Instructions For Both Remotes

Battery Installation:

1. On the back of the remote control, push down the tab and lift off the cover.
2. Match the + and - marks on the AAA batteries to the + and - marks inside the battery case.
3. Press the battery cover into place. The tab should click.

Code Saver:

You have up to 10 minutes to change the batteries in your remote without losing the codes you have programmed.

Updating Apollo:

1. Make sure that the VCR/DVD functions are active by pressing the "VCR/DVD" button at the top of the remote control.
2. Insert the Update Disc and press the "Channel Up" button once or twice until the LCD panel reads "System Updating". Updating can take up to 30 minutes per disc. After each disc updates, the LCD panel should read "Update Successful, Reboot the system". If an "Error" message is shown, please write down the error code and call 714-740-2070.
3. Turn your ApolloDMDs system off and then on again.
4. Repeat the process for each Update Disc.

Promo Only Inc.
Business Music Division
12425 Lewis Street, Suite 201
Garden Grove, CA 92840

P 714-740-2070
F 714-740-2066
W promoonly.com/bmd
E bmdsales@promoonly.com

PROMO ONLY

Orlando : Los Angeles : New York
London : Calgary : Chicago : Baltimore

| b m d |
Business Music Division

